BMLiteTool Scan tool user manual


- 1 Preparation work required before installation
- This product is an IP scan modification tool, which must have an accessible environment to the device
- 2 Users can learn this from http://www.m51c. The com/fwzx/download of the BMLiteTool client
- 3 Detailed description of the installation process

Install the BMLiteTool. And exe, running the BMLiteTool.exe


. 1) The BMLiteTool icon




2).Main interface

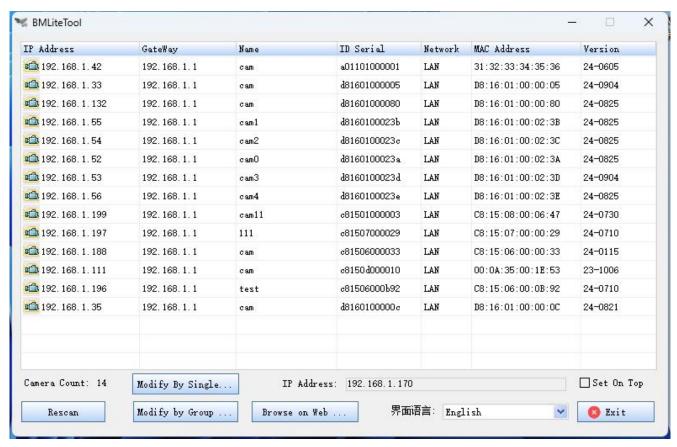

3). Successful scan search to the device is displayed below

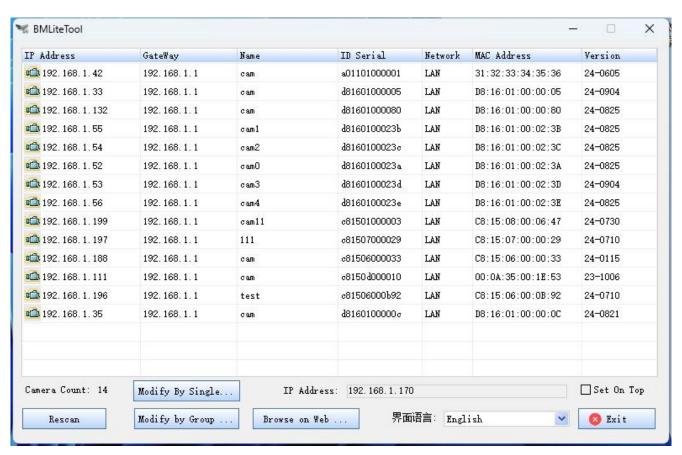

4). After scanning out the device information, you can double-click to enter the detailed configuration page

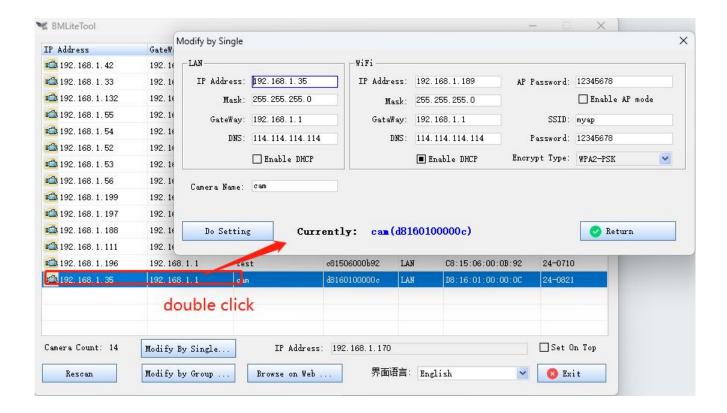

After the modification, click Set Parameters to save the modified settings

5) . Batch setting

